How to Connect Epson Printer to WiFi

Wireless printing is essential in modern workplaces and schools. This guide covers **three methods** to connect your Epson printer to WiFi — plus driver installation and troubleshooting tips.

EPSON
Wi-Fi
ecotank
BK
LC
M
C
Y
LM

Three Ways to Connect

Control Panel

Use the printer's built-in display or buttons to navigate WiFi settings.

WPS Push Button

One-touch setup using the WPS button on your router and printer.

Epson Smart Panel App

Use the mobile app — ideal for printers without a touchscreen.

Method 1: Control Panel

01

Go to Settings

Press the **Home** button and navigate to Settings.

02

Select WiFi Setup Wizard

Choose **WiFi Setup → Start Setup → WiFi Setup Wizard**.

03

Choose Your Network

Select your network from the list and enter the case-sensitive password.

04

Confirm & Test

Confirm the connection and take a test print.

METHOD 2

WPS Push Button

The fastest setup method — no menus required. Your router **must have a WPS button**.

1 Press & Hold Router WPS

Hold until the router's WPS light flashes.

2 Press Printer Wireless Button

Hold for **5 seconds** until it starts flashing.

3 Auto-Connect

The printer connects to the network automatically.

METHOD 3

Epson Smart Panel App

Best for printers **without a touchscreen**. Available on iOS and Android.

→ Download the App

Search "Epson Smart Panel" in the App Store or Play Store and install.

→ Add Your Printer

Tap the **(+)** icon, enable WiFi, and ensure your phone is on the same network.

→ Follow Instructions

Select your printer model, enter the network password, and complete setup.

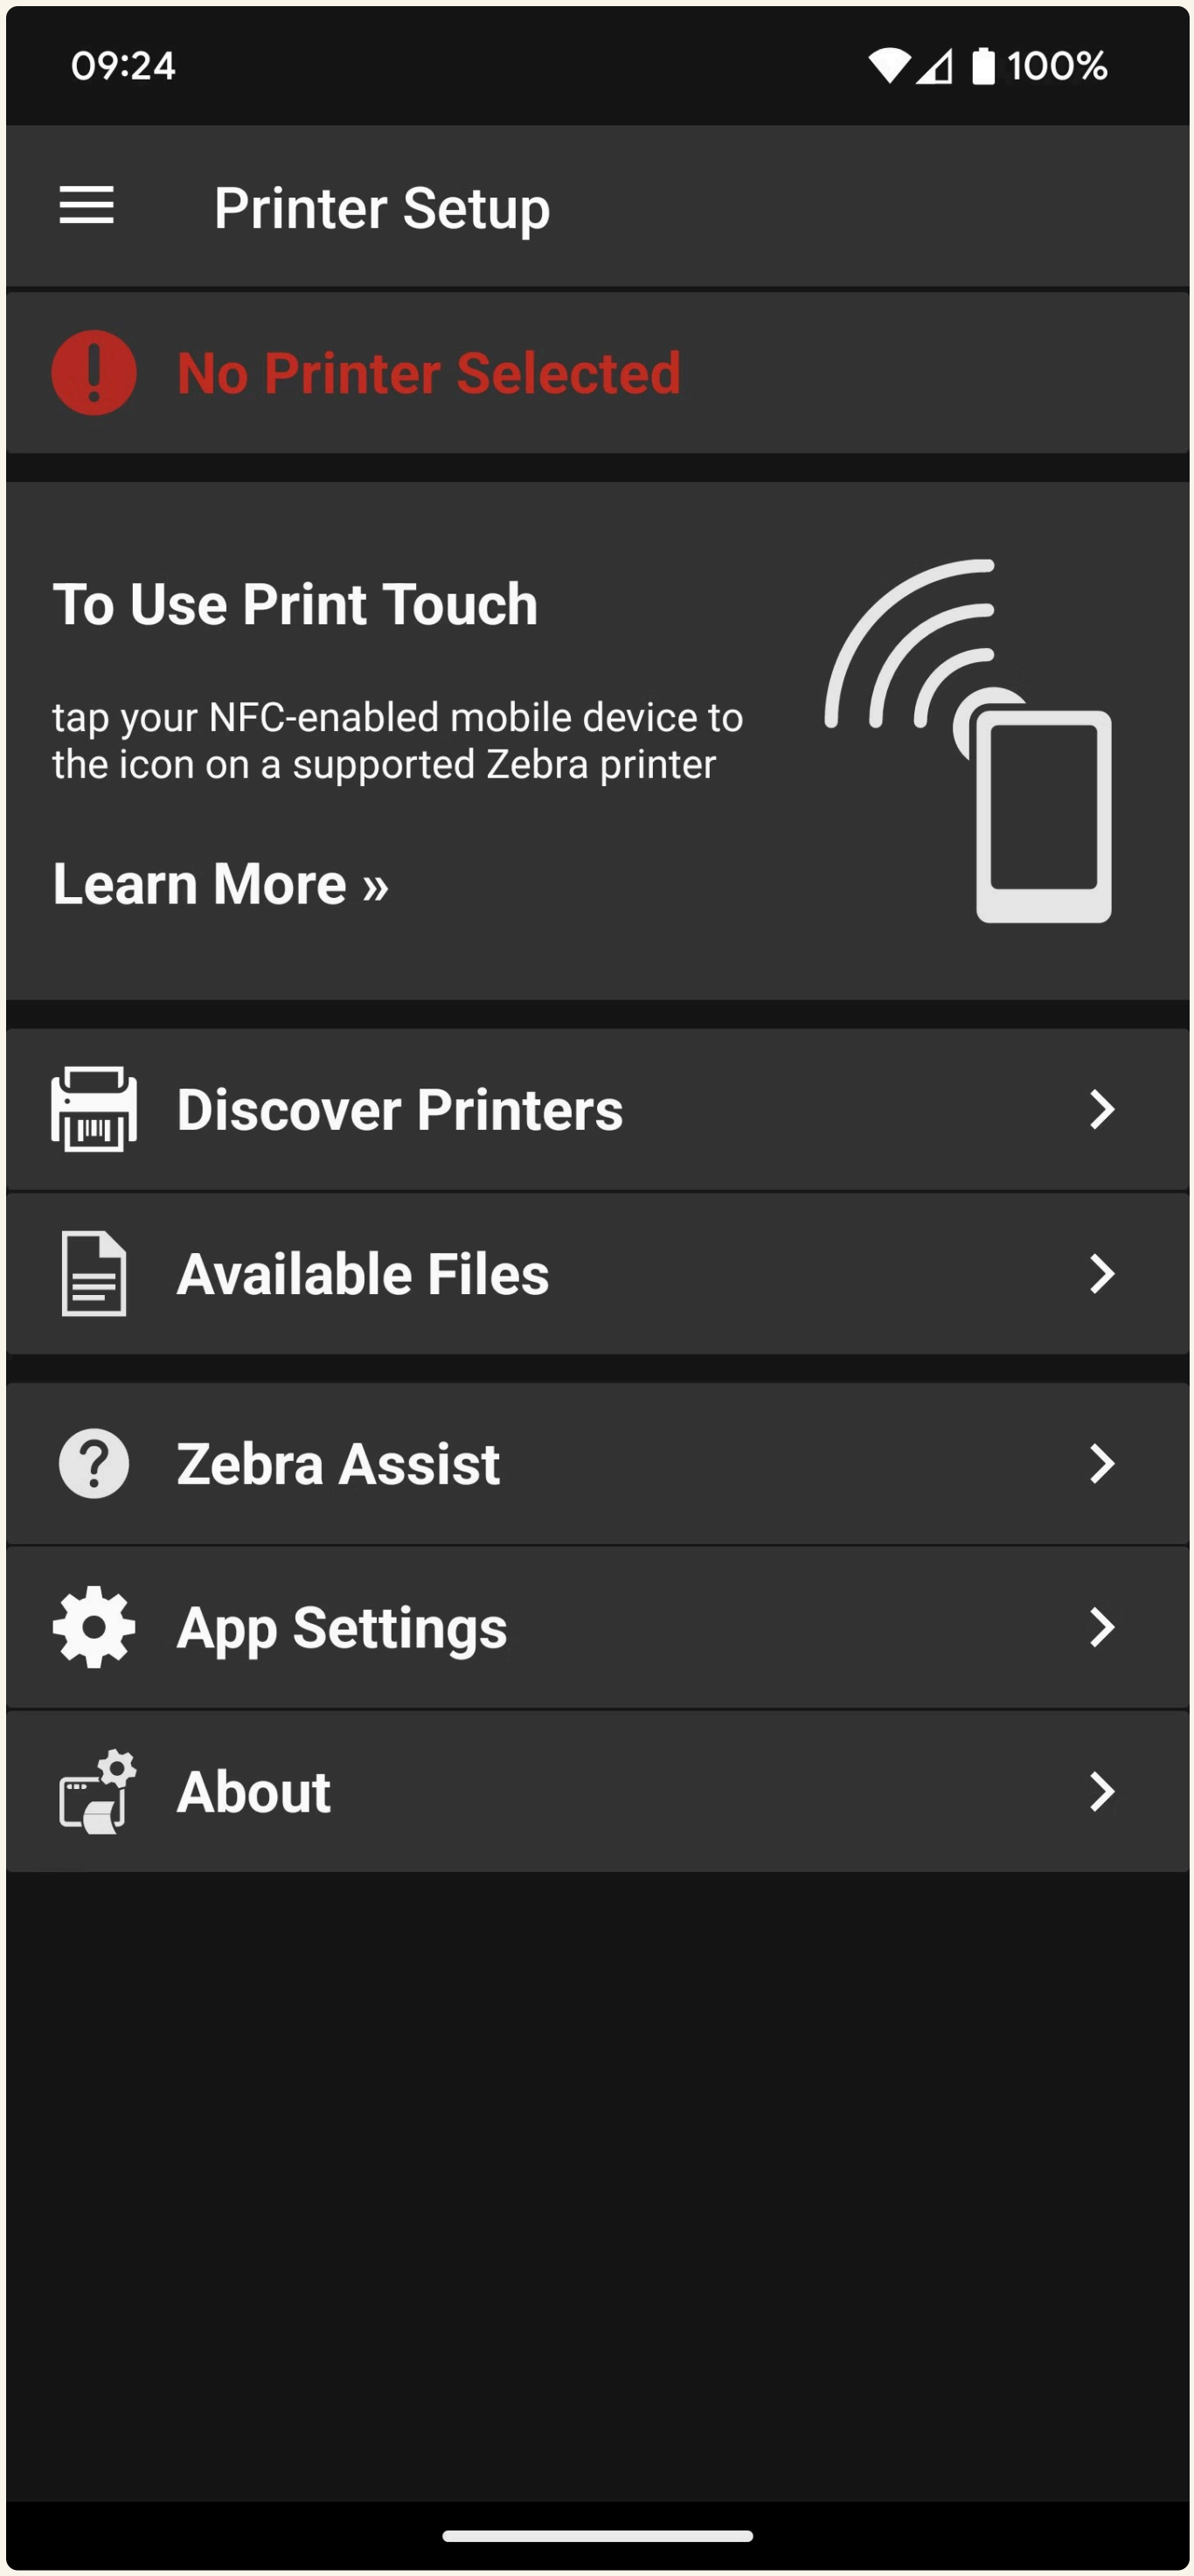

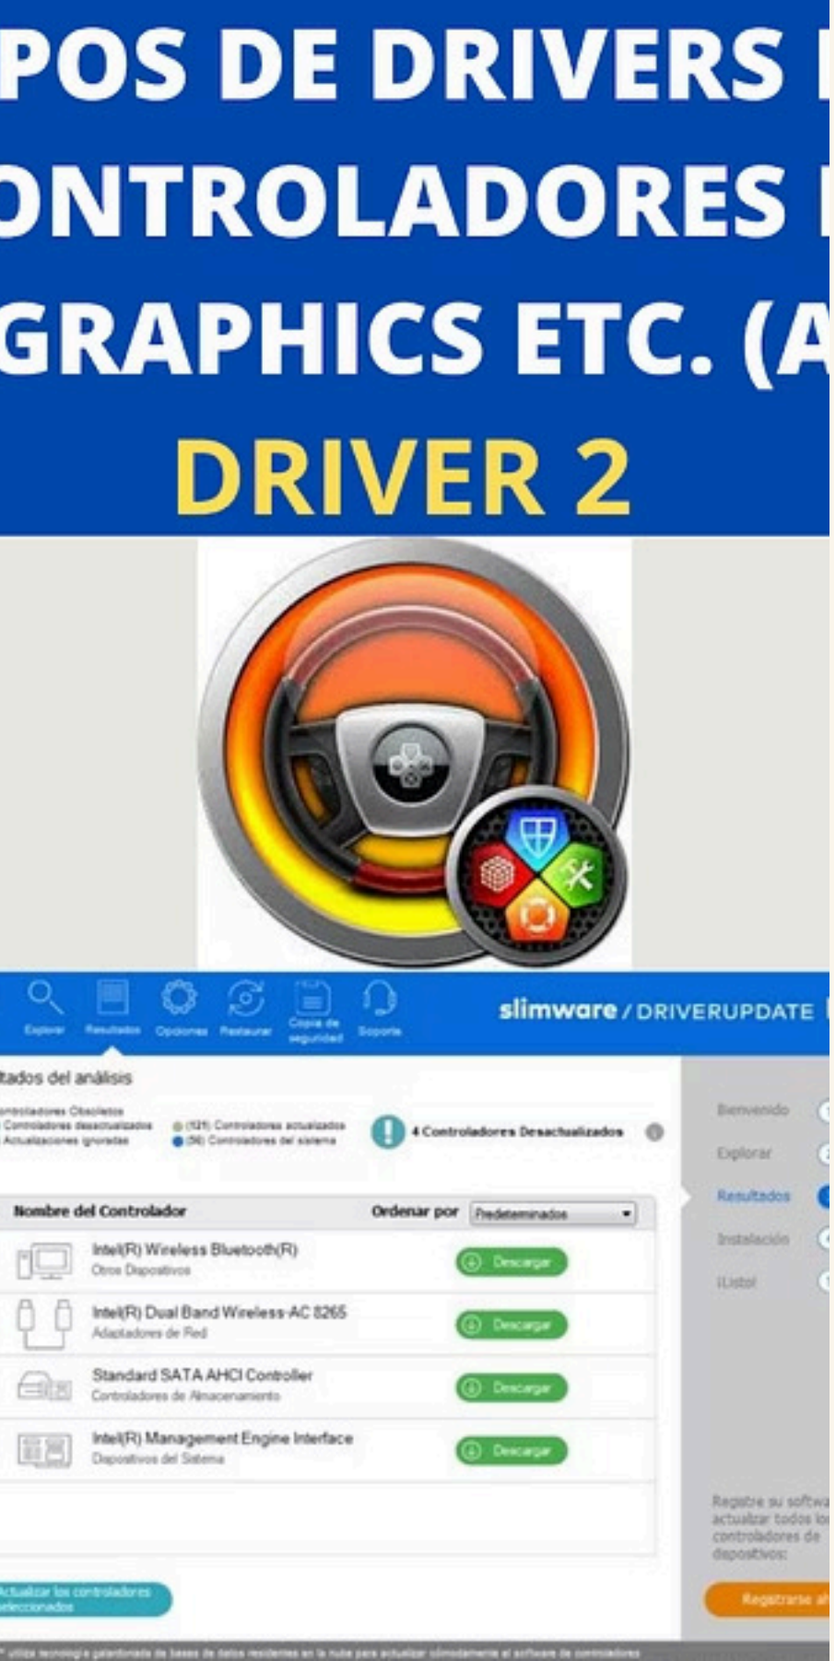

Download & Install Epson Printer Drivers

Drivers enable communication between your printer and computer. Without them, your printer won't respond to commands.

01

Visit Epson Support

Go to **epson.com/support** in your browser.

02

Search Your Model

Enter your printer model and select your operating system.

03

Download Driver

Select **Drivers** and click Download next to the suitable package.

04

Install

Open the downloaded file and follow the installation prompts.

Frequently Asked Questions

No Display? No Problem.

Use the **Epson Smart Panel app** — download it, add your printer model, and follow on-screen instructions to connect wirelessly.

Connecting via LAN Cable

Plug an Ethernet cable into the printer and router. Then go to **Settings → Network Settings → Wired LAN Setup** and follow the prompts.

Printer Not Connecting?

Most likely an **incorrect password**. Double-check it, then restart both your computer and printer to clear temporary glitches.

You're Ready to Print Wirelessly

Choose the method that fits your printer and setup — Control Panel, WPS, or Smart Panel App. Install your drivers, and you're all set for seamless wireless printing.